



Original	Replacement	Original	Replacement
	Power		Power
	><>		Red / Menu
	Source		Red / Menu
	I - II		Red / Menu
	Subtitles		Red / Menu
	[ i+ ]		Red / Menu
	[ ? ]		Red / Menu
	Mix		Red / Menu
	Zoom		Red / Menu
	Time		Red / Menu
	[ PP ]		Red / Menu
	DNR		Red / Menu
	Mosaic		Red / Menu
	Up		Red / Menu
	Down		Red / Menu
	Right		Red / Menu
	Left		Red / Menu
	Red / Menu		Red
	Red / Menu		Red
	Green / Menu		Green
	Green / Menu		Green
	Yellow / Other		Yellow
	Yellow / Other		Yellow
	Blue / OK		Blue
	Blue / OK		Blue
	Special Audio		Blue
	Text		Blue
	P -		Blue
	P +		Blue
	Vol -		Blue
	Vol +		Blue
	1		Blue
	2		Blue
	3		Blue





	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	Time		TV/R		Play		Play
	Zoom		3D		Timer		Shift + AV
	Mix		Text		P-		Ch -
	[?]		Shift + Info		P +		Ch +
	[i+]		Info		1		1
	Freeze/Rec		Pause		2		2
	Format/Stop		Format		3		3
	Source		AV		4		4
	I-II		Dual		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	Rec		Rec		0		0
	<<		<<		-/-		Guide
	>>		>>		-/-		Guide

