



Original		Replacement		Original		Replacement	
	Power		Power		6		6
	Power Tv		Shift + Power		CH/Page-		CH- / Page-
	CH+ Tv		Shift + CH+ /		7		7
	CH- Tv		Shift + CH- /		8		8
	Vol+ Tv		Vol+		9		9
	Vol- Tv		Vol-		ShowView		Smart / List
	Direct Tv Rec		Shift + Smart / List		*/Cancel		Fav / Marker / PC
	AV Tv		TV/Radio /		0		0
	HDD		Shift + 7		Input Select		AV / Input / RDS
	DVD		Shift + 2		Manual Skip		Shift + Back / Return
	SD		Sound / Title		I<<		I<< / Preset-
	1		1		>>I		>>I / Preset+
	2		2		<<		<< / Tune-
	3		3		>>		>> / Tune+
	CH/Page+		CH+ / Page+		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play		Play / Slow





Original	Replacement
	Guide / EPG / +/-
	Info / Angle
	+  Shift + TV/Radio / Program
	Up
	Display / Media
	Left
	OK
	Right
	Picture / Format
	Menu / Home
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Rec / Rec Mode

Original	Replacement
	+  Shift + Rec / Rec Mode
	Eject / Surround
	Sleep / Timer
	+  Shift + Sleep / Timer
	Audio / Lang I/II
	+  Shift + Display / Media
	+  Shift + OK

