





 


 
 

 


 
 


 
 

 
 
 



 


 




 
 






 










 
 


 
 


 








Original	Replacement	Original	Replacement
 Power	 Power	 Home/@	 Smart
 Source	 AV	 +P	 Ch +
 1	 1	 -P	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Q.Menu	 D. Menu
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 TV	 TV/R	 WWW	 Media
 Recall	 Pre Ch	 Music/Photo/Video	 Options
 Vol+	 Vol +	 Guide	 Guide
 Vol-	 Vol -	 Help	 Info
 Mute	 Mute	 */O	 Format





Original		Replacement		Original		Replacement	
	[≡]		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang.		Dual				
	Sleep		Sleep				
	[-O-]		Subt				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

