


 







 


Original	Replacement
Power	Power
Shift Clear	+ Shift + Exit
Shift 6	+ Shift + 6
Muting	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10/0	0
+10	Guide
Clear	Exit
Clock	+ Shift + AV

Original	Replacement
Timer	AV
Tuner Mode	Media
Rev Mode	+ Shift + <<
Shuffle/Program	+ Shift + Sleep
Treble	Subt
Album/Preset	Up
Album/Preset	Down
>>/>>	>>
>>/>>	>>
<</<<	<<
<</<<	<<
Enter	Ok
Repeat	Text
Bass	Dual
Play/Pause CD	Play
Play/Pause CD	Pause
<> Tape	+ Shift + Play





Original	Replacement
	 Stop
	 Smart
	 Options
	 Menu
	 Info
	 D. Menu
	 Vol +
	 Vol -
	 Sleep
	 Pre Ch

Original	Replacement

