 

 


 

 



 

 
 


 


 

 

 

 








 


 
 









 
 
 
 
 




 
 
 

 




 




Original	Replacement	Original	Replacement
	Power		Power
	Home		Smart
	Disc/Pop-Up Menu		D. Menu
	Radio		TV/R
	Audio Source		AV
	Top Menu		Menu
	Back		Back
	Options		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<		I<<
	>I		>>I
	Stop/Eject		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Sound Settings		Shift + Options
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original		Replacement		Original		Replacement	
	0		0				
	Repeat		Text				
	Subtitle		Subt				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

