 

 





 

 
 




 


 





 



 

 












 
 
 
 
 


 
 

 
 

 







 

 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	TV		TV/R
	Quick		Shift + Pre Ch
	ECO		Shift + 3D
	List		List
	Vol+		Vol +
	Vol-		Vol -
	AD		Shift + Subt
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Guide		Guide
	Exit		Exit
	Back		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original	Replacement
0	0
[i+]	Info
Recall	Pre Ch
[≡+]	Options
[≡♦]	Shift + Format
Play	Play
<<<	<<<
>>>	>>>
I<<<	I<<<
>>>I	>>>I
Stop	Stop
Rec	Rec
Pause/Step	Pause
[≡?]	D. Menu
[O]/[≡X]	Shift + AV
Text	Text
3D	3D

Original	Replacement
[v]	Smart
[>]	Sleep
-> [/] <-	Shift + Text
V.Format	Format
Audio I/II	Dual
More Info	Shift + Info
Subtitle	Subt

