




















 















 

| Original | Replacement | Original | Replacement |
|---------------|-----------------------------|------------|--------------------------|
| Power | Power | Subtitle | Subtitle / EQ |
| Eject | Eject / Surround | Zoom/Size | Zoom / Size |
| Tv/Radio | TV/Radio / | Aspect | Shift + Picture / Format |
| Red/Goto | Red / Netflix / Search | Subpage | Shift + Subtitle / EQ |
| Red/Goto | Shift + Text / | Media | Shift + Display / Media |
| Green/Angle | Info / Angle | Play | Play / Slow |
| Green/Angle | Green / APP / Repeat | Pause | Pause / Step / Freeze |
| Yellow/Repeat | Shift + Green / APP / | << / Tune- | |
| Yellow/Repeat | Yellow / YouTube / Repeat | >> / Tune+ | |
| Blue/A-B | Shift + Blue / Prime | Rec | Rec / Rec Mode |
| Blue/A-B | Blue / Prime Video / Random | D.Setup | Setup / OPT / |
| FAV | Fav / Marker / PC | Stop | Stop / Hold |
| Text | Text / Goto | I<< | I<< / Preset- |
| Freeze/Hold | Shift + Stop / | >>I/Index | >>I / Preset+ |
| Freeze/Hold | Shift + Pause / Step / | >>I/Index | Smart / List |
| EPG | Guide / EPG / -/-- | Menu | Menu / Home |
| D.Menu | D.Menu / Top | Lang/Audio | Audio / Lang I/II |

| Original | Replacement | Original | Replacement |
|------------|-----------------------|------------|--------------------------|
| Subtitle | Subtitle / EQ | Subtitle | Subtitle / EQ |
| Zoom/Size | Zoom / Size | Aspect | Shift + Picture / Format |
| Subpage | Shift + Subtitle / EQ | Media | Shift + Display / Media |
| Play | Play / Slow | Pause | Pause / Step / Freeze |
| << / Tune- | | >> / Tune+ | |
| Rec | Rec / Rec Mode | D.Setup | Setup / OPT / |
| Stop | Stop / Hold | I<< | I<< / Preset- |
| >>I/Index | >>I / Preset+ | >>I/Index | Smart / List |
| Menu | Menu / Home | Lang/Audio | Audio / Lang I/II |





| Original | Replacement |
|--|---|
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Sleep |  Sleep / Timer |
|  Down |  Down |
|  Title/Exit |  Shift + Sound / Title |
|  Title/Exit |  Exit / Cancel / Clear |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Display |  Display / Media |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |

| Original | Replacement |
|--|--|
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/-- |  Shift + Guide / EPG / -/-- |
|  0 |  0 |
|  Recall |  Back / Return |
|  Source |  AV / Input / RDS |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
| | |
| | |
| | |
| | |
| | |
| | |

