



Original	Replacement
Power	Power
VCR/DVD	Media
DVD Timer	Green
VCR Timer	Red
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/AUX	0
X/Cancel	Exit
Showview/Video Plus+	Guide
Prog/Check	Sleep

Original	Replacement
Display	Info
On Screen/Progressiv	3D
Top	Shift + Menu
Menu	Menu
Set Up	Options
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
I<</Previous	I<<
>>I/Next	>>I
<</Slow-	<<
Play/Select	Play
>>/Slow+	>>
Stop/Clear	Stop






 
 





Original	Replacement	Original	Replacement
Power	Power	Prog/Check	Sleep
VCR/DVD	Media	Display	Info
DVD Timer	Green	On Screen/Progressiv	3D
VCR Timer	Red	Top	Shift + Menu
1	1	Menu	Menu
2	2	Set Up	Options
3	3	Return	Back
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Enter	Ok
9	9	I<</Previous	I<<
0/AUX	0	>>/Next	>>I
X/Cancel	Exit	<</Slow-	<<
Memory/Mark	Smart	Play Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>





Original	Replacement	Original	Replacement
 Stop/Clear	 Stop		
 Pause	 Pause		
 Rec	 Rec		
 Remain/Rec	 Shift + Rec		
 ↔	 Pre Ch		
 →	 Blue		
 Angle/Live Check	 AV		
 Subtitle	 Subt		
 TV/DVD-TV/VCR	 TV/R		
 Mute/Audio	 Mute		
 PR+	 Ch +		
 PR- TV/CBL/DVD	 Ch -		
 Vol+ Tv	 Vol +		
 Vol- Tv	 Vol -		





Original	Replacement	Original	Replacement
Power	Power	Menu	Menu
VCR/DVD	Media	Up	Up
DVD Timer	Green	Down	Down
VCR Timer	Red	Right	Right
1	1	Left	Left
2	2	Enter	Ok
3	3	I<</Previous	I<<
4	4	>>/Next	>>I
5	5	<</Slow-	<<
6	6	Play/Select	Play
7	7	>>/Slow+	>>
8	8	Stop/Clear	Stop
9	9	Pause	Pause
0/AUX	0	Rec	Rec
Prog/Check	Sleep	Remain/Rec	Shift + Rec
Display	Info	↔	Pre Ch
Top	Shift + Menu	→	Blue

Original	Replacement	Original	Replacement
Power	Power	Menu	Menu
VCR/DVD	Media	Up	Up
DVD Timer	Green	Down	Down
VCR Timer	Red	Right	Right
1	1	Left	Left
2	2	Enter	Ok
3	3	I<</Previous	I<<
4	4	>>/Next	>>I
5	5	<</Slow-	<<
6	6	Play/Select	Play
7	7	>>/Slow+	>>
8	8	Stop/Clear	Stop
9	9	Pause	Pause
0/AUX	0	Rec	Rec
Prog/Check	Sleep	Remain/Rec	Shift + Rec
Display	Info	↔	Pre Ch
Top	Shift + Menu	→	Blue





Original	Replacement	Original	Replacement
Angle/Live Check	AV		
Subtitle	Subt		
PR+	Ch +		
PR- TV/CBL/DVD	Ch -		
Vol+ Tv	Vol +		
Vol- Tv	Vol -		

Original	Replacement

