



Original		Replacement		Original		Replacement	
	Standby		Power		Recall		Back
	Tv/Radio		TV/R		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		EPG		Guide
	0		0		Subtitle		Subt
	Goto		Smart		Audio		Dual
	Favourite		Pre Ch		TTX		Text
	Menu		Menu		<<		<<
	Info		Info		>>		>>





	Original	Replacement	Original	Replacement
	I<<		I<<	
PREV				
	>>I		>>I	
NEXT				
	Play		Play	
PLAY				
	Pause		Pause	
PAUSE				
	Stop		Stop	
STOP				
	Rec		Rec	
REC				
	Repeat	 + 	Shift + Text	
REPEAT				
	Page+	 + 	Shift + Ch +	
PAGE+				
	Page-	 + 	Shift + Ch -	
PAGE-				
	PVR		Media	
PVR				
	Red/USB		Red	
USB				
	Green/V-Format		Green	
V-FORMAT				
	Yellow/Aspect		Yellow	
ASPECT				
	Blue/Timer		Blue	
TIMER				

