


 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 -/--	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Original	Replacement	Original	Replacement
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 PLAY MODE	 REC MODE
 Vol +	 Vol +	 Play	 Pause
 Vol +	 Right	 Stop	 Red
 Vol -	 Vol -	 Fast Backward	 Fast Forward
 Vol -	 Left	 DISC NAV	 SOUND
 OK	 Ok	 AD	 SETTINGS
 SWAP	 Back	 LIST	 DUAL
 16:9	 Format	 SUBT	 OPT
 White / i	 Info	 PROG	 SEARCH
 Red	 Red	 PICTURE	 ECO
 Green	 Green	 SLEEP	 TV/R
 Yellow	 Yellow	 FORMAT	 3D
 Blue	 Blue	 E-MANUAL	 REPEAT
 Stop	 Stop	 ZOOM	 TIMER
 Reveal	 Smart	 D.MENU	 TEXT





	Original	Replacement	Original	Replacement
	Double	 Media		
	SUB	 Subt		
	MIX	 +  Shift + Text		
	Update	 Eject		

