



Original	Replacement	Original	Replacement
Power	Power	Vol+ Tv	Shift + Vol+
Power Tv	Shift + Power	Rec	Rec / Rec Mode
Tv/PVR	TV/Radio /	0	0
Vol-	Vol-	Timeshift	Setup / OPT /
Vol+	Vol+	Vol- Tv	Shift + Vol-
Av Input Tv	AV / Input / RDS	<< Scan	<< / Tune-
1	1	Scan >>	>> / Tune+
2	2	<< Skip	<< / Preset-
3	3	Skip >>	>> / Preset+
PR/CH+ Tv	Shift + CH+ /	Pause	Pause / Step / Freeze
4	4	Play	Play / Slow
5	5	Stop	Stop / Hold
6	6	Home	Menu / Home
PR/CH- Tv	Shift + CH- /	Guide	Guide / EPG / -/-
7	7	Up	Up
8	8	Left	Left
9	9	OK	OK



