

 

 





 

 

 

 

 



 

 










 



 

 

 





Original	Replacement
	 Power
	 Mute / Dimmer
	 Audio / Lang I/II
	 Picture / Format
	 Setup / OPT /
	 Text / Goto
	 Up
	 Left
	 Right
	 Down
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2

Original	Replacement
	 7
	 9
	 Shift + Vol+
	 Shift + CH+ /
	 Shift + Vol-
	 Shift + CH- /

