







 

 

 

 

 

 

 

 



 



 



 







 



 



 





 

 

 












 




Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	[≡]		Text / Goto
	[...]		Subtitle / EQ
	Home		Shift + Menu /
	End		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	<		I<< / Preset-
	0		0
	>		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	Exit		Exit / Cancel / Clear
	Channel+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/--
	Channel-		CH- / Page-
	Menu		Menu / Home





	Original	Replacement	Original	Replacement
	[≡R]	 Eject / Surround		
	Audio	 Audio / Lang I/II		
	Help	 D.Menu / Top		
	<<	 << / Tune-		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	TV	 Shift + 1		
	TV	 TV/Radio /		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Radio	 Shift + 6		
	Radio	 Shift + TV/Radio / Program		

