


 





 


 
 
 

 


 


 
 
 




 




 







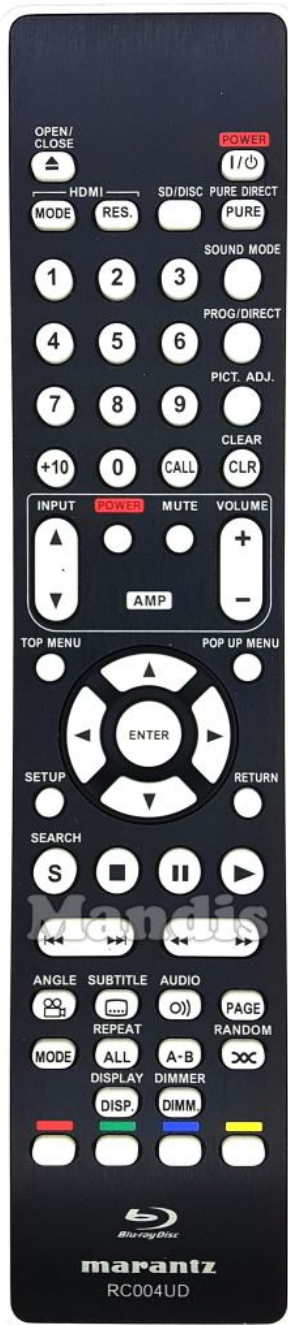 
Original	Replacement	Original	Replacement
 Power	 Power	 7	 7
 Open/Close	 Eject	 8	 8
 HDMI Mode	 Smart	 9	 9
 HDMI Res.	 Media	 0	 0
 SD/Disc	 AV	 +10	 Guide
 Pure/Pure Direct	 Shift + List	 Input Up AMP	 Ch +
 Sound Mode	 Dual	 Input Down	 Ch -
 Prog/Direct	 Sleep	 Power AMP	 Shift + Power
 Pict. ADJ.	 Format	 Mute AMP	 Mute
 Clear	 Exit	 Vol+ AMP	 Vol +
 Call	 Pre Ch	 Vol- AMP	 Vol -
 1	 1	 Top Menu	 Menu
 2	 2	 Pop Up Menu	 D. Menu
 3	 3	 Return	 Back
 4	 4	 Setup	 Options
 5	 5	 Up	 Up
 6	 6	 Down	 Down






 
 


 




 
 







 
 

 




 
 
 

 


Original		Replacement		Original		Replacement	
	Right		Right		A-B		Shift + TV/R
	Left		Left		Random		Shift + Subt
	Enter		Ok		Display		Info
	Search		TV/R		Dimmer		Shift + 3D
	Stop		Stop		Red		Red
	Pause		Pause		Green		Green
	Play		Play		Blue		Blue
	I<<		I<<		Yellow		Yellow
	>>I		>>I				
	<<		<<				
	>>		>>				
	Angle		3D				
	[...]/Subtitle		Subt				
	Audio		Shift + Dual				
	Page		List				
	Mode		Shift + Options				
	All/Repeat		Text				

 



 




 

 
 


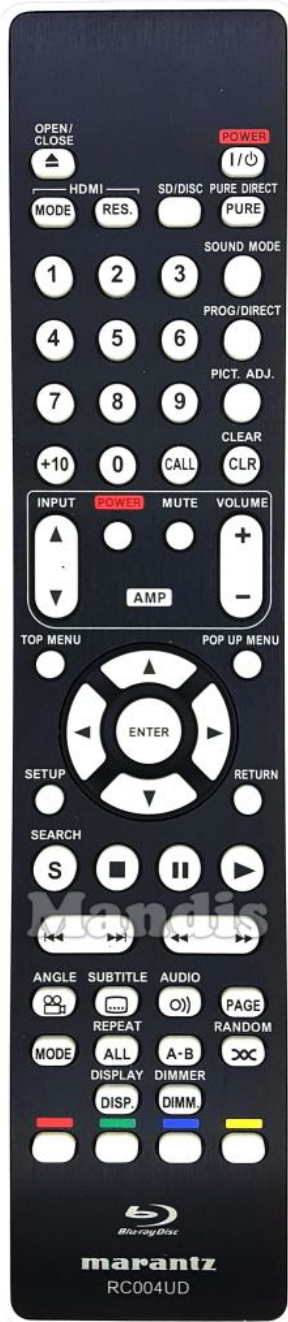 


 
Original	Replacement	Original	Replacement
Power		Power	
Open/Close		Eject	
HDMI Mode		Smart	
HDMI Res.		Media	
SD/Disc		AV	
Pure/Pure Direct		Shift + List	
Sound Mode		Dual	
Prog/Direct		Sleep	
Pict. Adj.		Format	
Clear		Exit	
Call		Pre Ch	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	

Original	Replacement	Original	Replacement
7		7	
8		8	
9		9	
0		0	
+10		Guide	
Input Up AMP		Ch +	
Input Down		Ch -	
Power AMP		Shift + Power	
Mute AMP		Mute	
Vol+ AMP		Vol +	
Vol- AMP		Vol -	
Top Menu		Menu	
Pop Up Menu		D. Menu	
Return		Back	
Setup		Options	
Up		Up	
Down		Down	





Original	Replacement	Original	Replacement
Right		Right	
Left		Left	
Enter		Ok	
Search		TV/R	
Stop		Stop	
Pause		Pause	
Play		Play	
I<<		I<<	
>>I		>>I	
<<		<<	
>>		>>	
Angle		3D	
[...]/Subtitle		Subt	
Audio		Shift + Dual	
Page		List	
Mode		Shift + Options	
All/Repeat		Text	

Original	Replacement	Original	Replacement
A-B	 + 	Shift + TV/R	
Random	 + 	Shift + Subt	
Display		Info	
Dimmer	 + 	Shift + 3D	
Red		Red	
Green		Green	
Blue		Blue	
Yellow		Yellow	

