



 







 




 




 












 



 



 




 




 

 

 

 












Original	Replacement	Original	Replacement
	Power		Power
	Display/OSD		Info
	A-B		3D
	Mode		Options
	Clock		AV
	Sleep/Timer		Sleep
	System Menu		Menu
	Disc Menu		D. Menu
	Audio		Dual
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	>>		>>
	<<		<<
	>		>>
	>		Ch +
	<		Ch -
	<		Ch -
	Play		Play
	Pause		Pause
	Stop		Stop
	Vol +		Vol +
	Vol -		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original	Replacement
 Power	 Power
 Display/OSD	 Info
 Clock	 AV
 Right	 Right
 Sleep/Timer	 Sleep
 Left	 Left
 <<	 <<
 >>	 >>
 Mute	 Mute
 >	 >>
 >	 Ch +
 <	 <<
 <	 Ch -
 Stop	 Stop
 Vol +	 Vol +
 Vol -	 Vol -
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog	 Shift + Sleep
 DSC	 Guide
 DBB	 Pre Ch

