



Original	Replacement	Original	Replacement
 Standby	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Text	 Text
 Audio	 Dual	 Red	 Red
 Recall	 Back	 Green	 Green
 Subtitle	 Subt	 Yellow	 Yellow
 Info	 Info	 Blue	 Blue





	Original	Replacement	Original	Replacement
 REC LIST	Rec List	 LIST	List	
 TV/RADIO	Tv/Radio	 SEARCH TV/R	TV/R	
 STOP	Stop	 STOP	Stop	
 PAUSE	Pause	 PAUSE	Pause	
 REV	<<	 REV	<<	
 FWD	>>	 FWD	>>	
 RECORD	Record	 REC MODE	Rec	

