





 

 






 

 

 







| Original | Replacement |
|---|--|
|  3D |  Picture / Format |
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Prog+ |  CH+ / Page+ |
|  0 |  0 |
|  Vol+ |  Vol+ |
|  Prog- |  CH- / Page- |
|  Vol- |  Vol- |

| Original | Replacement |
|--|---|
|  Up/CH+ |  Up |
|  Left/Vol- |  Left |
|  OK |  OK |
|  Right/Vol+ |  Right |
|  Down/CH- |  Down |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Info |  Info / Angle |
|  EPG |  Guide / EPG / -/-- |
|  List |  Smart / List |
|  TXT |  Text / Goto |
|  S-T |  Sound / Title |
|  Tv/R |  TV/Radio / |
|  Timer |  Sleep / Timer |
|  Audio |  Audio / Lang I/II |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |





| Original | Replacement |
|--|---|
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |
|  ← |  Back / Return |
|  << |  << / Tune- |
|  Red |  Red / Netflix / Search |
|  >> |  >> / Tune+ |
|  Green |  Green / APP / Repeat |
|  << |  << / Preset- |
|  Yellow |  Yellow / YouTube / Repeat |
|  >> |  >> / Preset+ |
|  Blue |  Blue / Prime Video / Random |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

