










Original	Replacement	Original	Replacement
	Power		Power
	Input		AV
	TV/TXT		Text
	Cancel		Media
	Reveal		D. Menu
	Nicam/A2		Dual
	Size		Format
	Hold		Eject
	Index		TV/R
	Subpage		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Mute		Mute
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Channel List		Smart
	EPG		Guide
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5





	Original	Replacement
	6	6
	7	7
	8	8
	9	9
	0	0
	FAV	Pre Ch
	Recall	Back
	Picture	+ Shift + Format
	Sound	+ Shift + Dual
	Sleep	Sleep
	Subtitle	Subt
	Rec	Rec
	Aspect	3D
	<<	<<
	>>	>>
	<<	<<
	>>	>>

	Original	Replacement
	Play	Play
	Pause	Pause
	Stop	Stop
	List	List
	Repeat	+ Shift + Text

