



Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Shift + Picture / Format		3		3
	Media		Shift + Display / Media		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	P.Mode		Picture / Format		7		7
	S.Mode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/--		Shift + Guide / EPG / -/--
	Left		Left		Recall		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





	Original	Replacement		Original	Replacement
		Vol+			Stop
		CH-			Rec/Repeat
		FAV			Rec/Repeat
		Tv/Radio			T-Shift
		Vol-			Red
		Text			Green
		EPG			Yellow
		Subtitle			Cyan
		Index			
		<</Hold			
		<</Hold			
		Size			
		>>			
		I<</Reveal			
		>>I/Subpage			
		Play			
		Pause			
					Stop / Hold
					Rec / Rec Mode
					Shift + Green / APP / APP /
					Eject / Surround
					Red / Netflix / Search
					Green / APP / Repeat
					Yellow / YouTube / Repeat
					Blue / Prime Video / Random

