 



 



 

 

 

 

 









 




 








Original		Replacement		Original		Replacement	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat





	Original	Replacement	Original	Replacement
	 Blue	 Blue / Prime Video / Random	 >>	 >> / Preset+
	 TTX	 Text / Goto	 FAV	 Fav / Marker / PC
	 Index	 D.Menu / Top		
	 Hold	 Shift + Stop /		
	 I/II/Audio	 Audio / Lang I/II		
	 Repeat/Rec	 Rec / Rec Mode		
	 Repeat/Rec	 Shift + Green / APP /		
	 Stop/Reveal	 Stop / Hold		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 Size	 Zoom / Size		
	 Subtitle	 Subtitle / EQ		
	 <</Subpage	 << / Tune-		
	 >>	 >> / Tune+		
	 Tv/Radio	 TV/Radio /		
	 I<<	 I<< / Preset-		
	 EPG	 Guide / EPG / -/--		

