

 





 
 
 


 




 



 





 


 


 
 




 

 




 
 





Original	Replacement	Original	Replacement
 Power	 Power	 i	 Info
 Mute	 Mute	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 V +	 Vol +
 6	 6	 V -	 Vol -
 7	 7	 TV / Radio	 TV/R
 8	 8	 List	 List
 9	 9	 P +	 Ch +
 0	 0	 P -	 Ch -
 Back	 Back	 Red	 Red
 APP	 Media	 Green	 Green
 Menu	 Menu	 Yellow	 Yellow
 Exit	 Exit	 Blue	 Blue
 EPG	 Guide	 Audio	 Dual



