



Original	Replacement	Original	Replacement
Power Audio	Power	9	9
Power Tv	+ Shift + Power	0	0
Bluetooth Setting	Smart	10	Guide
Rec Mode	Rec	>10	Pre Ch
Title Search	+ Shift + TV/R	10	Sleep
Tv/Video	TV/R	0	Media
Eco Dimmer	3D	Tv Channel +	Ch +
Display/Chara	Info	>10	AV
Title Edit	D. Menu	Tv Channel -	Ch -
1/Marc	1	Tv Vol+	+ Shift + Vol +
2	2	Tv Vol-	+ Shift + Vol -
3	3	Return	Back
4	4	Top Menu/PG	+ Shift + Menu
5	5	Menu/PL	Menu
6	6	Audio Vol+	Vol +
7	7	Audio Vol-	Vol -
8	8	Cancel	Exit





Original	Replacement	Original	Replacement
Fade Muting	Mute	Tuner/Play	Shift + Play
On Screen	Shift + Info	Play/Pause	Red
Up	Up	Play/Pause	Green
Down	Down	Play/Pause	Yellow
Right	Right	Play/Pause Bluetooth	Blue
Left	Left	Audio/MPX	Dual
Enter/Set	Ok	Subtitle	Subt
Stop	Stop	Zoom	Eject
Play	Play	FM/AM/Audio In	Format
Pause	Pause	File Type	Shift + Subt
I<<	I<<	Angle	List
>>I	>>I	Set Up	Options
I<< Group/Title Skip	Shift + I<<	VFP/Scan Mode	Shift + 1
>>I Group/Title Skip	Shift + >>I	3D Phonic/HP Surr	Shift + 2
<<	<<	C.Voice	Shift + Mute
>>	>>	DVD/Audio In	Shift + 3
>> Group/Title	Shift + >>	Sound Mode	Shift + Dual





Original	Replacement	Original	Replacement
 Repeat	 Text		
 My Sound	 Shift + Media		
 V.Bass	 Shift + 4		
 Repeat A-B	 Shift + Text		

