 
 








 

 


 






 


 


 


 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 TXT	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Replacement
 Guide	 Guide
 ?	 Dual
 Exit	 Exit
 Menu	 Menu
 Back	 Back
 Tools	 Options
 @	 Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV
 P+	 Ch +





	Original	Replacement	Original	Replacement
	 P-	 Ch -		
	 <	 <<		
	 >	 >>		
	 <<	 <<<		
	 >>	 >>>		
	 Rec	 Rec		
	 Play	 Play		
	 Pause	 Pause		
	 Stop	 Stop		
	 3D	 3D		
	 OQ	 Format		
	 [...]..	 Subt		
	 Netflix	 Smart		
	 My Media	 Shift + Media		

