 




| Original   | Replacement  |
|--|--|
|  Power            |  Power                    |
|  Mute             |  Mute / Dimmer            |
|  Anyview Cast     |  Shift + Up               |
|  Anyview Cast Off |  Shift + Down             |
|  TV               |  TV/Radio /               |
|  Source           |  AV / Input / RDS         |
|  I<<              |  I<< / Preset-            |
|  Stop             |  Stop / Hold              |
|  >>I              |  >>I / Preset+            |
|  <<               |  << / Tune-               |
|  Play            |  Play / Slow             |
|  >>             |  >> / Tune+             |
|  DMP            |  Display / Media        |
|  Pause          |  Pause / Step / Freeze  |
|  FAV            |  Fav / Marker / PC      |
|  Red            |  Red / Netflix / Search |
|  Green          |  Green / APP / Repeat   |

| Original  | Replacement   |
|---|---|
|  Yellow    |  Yellow / YouTube / Repeat   |
|  Blue      |  Blue / Prime Video / Random |
|  Menu      |  Menu / Home                 |
|  HiSmart   |  Smart / List                |
|  Up        |  Up                          |
|  Left      |  Left                        |
|  OK        |  OK                          |
|  Right     |  Right                       |
|  Return    |  Shift + Back / Return       |
|  Down      |  Down                        |
|  Exit     |  Exit / Cancel / Clear      |
|  Vol+    |  Vol+                      |
|  CH.List |  Shift + Smart / List      |
|  CH+     |  CH+ / Page+               |
|  Vol-    |  Vol-                      |
|  EPG     |  Guide / EPG / -/-         |
|  CH-     |  CH- / Page-               |



