



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ? / Audio	 Audio / Lang I/II
 0	 0
 Aspect / Subtitle	 Zoom / Size
 Aspect / Subtitle	 Subtitle / EQ
 PIP / Recall	 Fav / Marker / PC
 AV	 AV / Input / RDS
 Mute	 Mute / Dimmer

Original	Replacement
 i	 Info / Angle
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Z / Return	 Back / Return
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 TXT / Menu	 Menu / Home
 TXT / Menu	 Text / Goto
 Down / P-	 Down
 Down / P-	 CH- / Page-
 TV-G / Top	 D.Menu / Top
 Red / Rec	 Rec / Rec Mode
 Red / Rec	 Red / Netflix / Search
 Green / Play	 Play / Slow





	Original	Replacement	Original	Replacement
	Green / Play	Green / APP / Repeat		
	Yellow / Pause	Yellow / YouTube / Repeat		
	Yellow / Pause	Pause / Step / Freeze		
	Blue / Stop	Blue / Prime Video / Random		
	Blue / Stop	Stop / Hold		
	Scan / I<	I<< / Preset-		
	PAT / >I	>>I / Preset+		
	S / <<	<< / Tune-		
	P / >>	>> / Tune+		

