

 
 



 
 


 
 

 


 
 


 
 


 

 


 
 

 
 



 
 
 

 
 
 
 

 

 
 
 
 


 
 

 



 
 




 




Original	Replacement	Original	Replacement
 Power	 Power	 Audio	 Dual
 Open / Close	 Eject	 Clear	 Exit
 HDD	 Smart	 Red	 Red
 DVD	 Media	 Green / Subtitle	 Green
 Prog +	 Ch +	 Green / Subtitle	 Subt
 Prog -	 Ch -	 Yellow / Angle	 Yellow
 Input	 AV	 Yellow / Angle	 Format
 1	 1	 Blue / Play Mode	 Blue
 2	 2	 Blue / Play Mode	 +  Shift + Play
 3	 3	 System Menu	 D. Menu
 4	 4	 Title List / Top Menu	 +  Shift + Menu
 5	 5	 Title List / Top Menu	 List
 6	 6	 Guide	 Guide
 7	 7	 Menu	 Menu
 8	 8	 TV / DVD	 TV/R
 9	 9	 Info	 Info
 0	 0	 Up	 Up





Original		Replacement		Original		Replacement	
	Right		Right		Rec Stop	+	Shift + Stop
	Down		Down		DUB HDD/DVD	+	Shift + Smart
	Left		Left		Rec Mode	+	Shift + Rec
	Enter		Ok		TV Vol +		Vol +
	Return		Back		TV Vol -		Vol -
	Display	+	Shift + Info		TV Prog +	+	Shift + Ch +
	I<< / Page -		I<<		TV Prog -	+	Shift + Ch -
	<·	+	Shift + Left		TV Power	+	Shift + Power
	·>	+	Shift + Right		TV Input	+	Shift + AV
	>>I / Page +		>>I				
	<< / Day - / <I / <II		<<				
	Play		Play				
	>> / Day + / I> / II>		>>				
	TV Pause	+	Shift + Pause				
	Pause		Pause				
	Stop		Stop				
	Rec		Rec				

