


 
 






 



 

 

 




 
 


 



 



 

 



 

 



 



 

 

 





 

 






Original		Replacement		Original		Replacement	
	Standby		Power		Clear		Exit
	Open / Close		Eject		Setup		Options
	Mute		Mute		Search		TV/R
	OSD		Smart		Up		Up
	Step		Shift + Pause		Right		Right
	Recover		Media		Down		Down
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		Subtitle		Subt
	4		4		Audio		Dual
	5		5		Play		Play
	6		6		Pause		Pause
	7		7		Stop		Stop
	8		8		I<<		I<<
	9		9		>>I		>>I
	0		0		<<		<<
	+10		Guide		>>		>>





Original	Replacement	Original	Replacement
 Angle	 Format		
 Zoom	 +  Shift + Eject		
 3D	 3D		
 Prog	 Sleep		
 Title	 Info		
 Repeat	 Text		
 A-B	 +  Shift + Text		
 Slow	 +  Shift + Play		
 Menu	 Menu		
 N/P	 List		
 Vol -	 Vol -		
 Vol +	 Vol +		
 PS	 Yellow		
 Audio Up	 +  Shift + Dual		

