 




Original	Replacement	Original	Replacement
 Power	 Power	 USB	 AV
 Mute	 Mute	 Menu	 Menu
 1	 1	 EPG	 Guide
 2	 2	 Exit	 Exit
 3	 3	 Goto	 Smart
 4	 4	 Play	 Play
 5	 5	 Pause	 Pause
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Rec	 Rec
 9	 9	 Stop	 Stop
 0	 0	 UP	 Up
 Info	 Info	 Down	 Down
 FAV	 Pre Ch	 Right	 Right
 Page+	 >>	 Left	 Left
 Page-	  <<	 OK	 Ok
 Audio	 Dual	 CH+	 Ch +

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 PLAY	 PAUSE
 STOP	 STOP	 REVERSE	 REVERSE
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	
 TOP MENU	 DISPLAY	 INFO	
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 HOME	 SMART
 VOL+	 APP	 MEDIA	 CH-
 VOL-	 1	 2	 3
 1	 4	 5	 6
 2	 7	 8	 9
 3	 8	 9	 FAV
 4	 GUIDE	 0	 PRE-CH
 5	 A	 B	 C
 6	 Mandis SHOP	 D	 www.mandis.tv





Original		Replacement		Original		Replacement	
	CH-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	TV/Radio		TV/R				
	Teletext		Text				
	Subtitle		Subt				
	Recall		Back				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

