



 







































 



























| Original | Replacement | Original | Replacement |
|--|--|---|--|
|  Power |  Power |  V - |  Vol- |
|  Mute |  Mute / Dimmer |  Home |  Shift + Menu / |
|  1 |  1 |  CH - |  CH- / Page- |
|  2 |  2 |  Menu |  Menu / Home |
|  3 |  3 |  Up |  Up |
|  4 |  4 |  Source |  AV / Input / RDS |
|  5 |  5 |  Left |  Left |
|  6 |  6 |  Enter |  OK |
|  7 |  7 |  Right |  Right |
|  8 |  8 |  Exit |  Exit / Cancel / Clear |
|  9 |  9 |  Down |  Down |
|  List |  Smart / List |  Display |  Display / Media |
|  0 |  0 |  P.Mode |  Picture / Format |
|  Recall |  Back / Return |  S.Mode |  Sound / Title |
|  V + |  Vol+ |  Sleep |  Sleep / Timer |
|  Aspect |  Shift + Picture / Format |  MTS |  Shift + Smart / List |
|  CH + |  CH+ / Page+ |  Rec |  Rec / Rec Mode |





| Original | | Replacement | | Original | | Replacement | |
|---|--------------|---|-----------------------------|---|----------------|---|-------------------------|
|  | Guide |  | Guide / EPG / -/-- |  | CAP |  | Shift + Display / Media |
|  | Red |  | Red / Netflix / Search |  | Subtitle |  | Subtitle / EQ |
|  | Green |  | Green / APP / Repeat |  | TV / Radio |  | TV/Radio / |
|  | Yellow |  | Yellow / YouTube / Repeat |  | FAV |  | Fav / Marker / PC |
|  | Blue |  | Blue / Prime Video / Random |  | Size / Mouse |  | Zoom / Size |
|  | << / Index |  | << / Tune- |  | Hold / Refresh |  | Stop / Hold |
|  | << / Index |  | Shift + << / | | | | |
|  | Play/Pause / |  | Shift + Play / | | | | |
|  | Play/Pause / |  | Pause / Step / Freeze | | | | |
|  | Play/Pause / |  | Play / Slow | | | | |
|  | >> / TTX |  | >> / Tune+ | | | | |
|  | >> / TTX |  | Shift + >> / | | | | |
|  | I<< / Sub.Pg |  | Shift + I<< / Preset- | | | | |
|  | I<< / Sub.Pg |  | I<< / Preset- | | | | |
|  | >>I / Reveal |  | >>I / Preset+ | | | | |
|  | Stop / Mix |  | Shift + Rec / Rec Mode | | | | |
|  | Stop / Mix |  | Shift + Stop / | | | | |

Hold

