



Original	Replacement	Original	Replacement
	Power		TV
	1		Shift + 1
	2		Shift + Up
	3		Up
	4		AV / Input / RDS
	5		Left
	6		Shift + Left
	7		Menu / Home
	8		Shift + Menu /
	9		Right
	Mute		Shift + Right
	0		Exit / Cancel / Clear
	16:9		Shift + Down
	Red		Down
	Green		Back / Return
	Yellow		Shift + Back / Return
	Blue		Info / Angle
			Subtitle / EQ





Original	Replacement	Original	Replacement
	≡i		Shift + Info / Angle
	PP		Sound / Title
	≡		Text / Goto
	/≡		Setup / OPT /
	Hold		Stop / Hold
	Size		Zoom / Size
	≡X		Sleep / Timer
	≡?		D.Menu / Top

Original	Replacement

