 


 

 
 


 




 








 
 
 









Original	Replacement	Original	Replacement
 Power	 Power	 Remain	 Guide
 DVD	 Shift + 1	 Cancel	 Exit
 Tuner	 Shift + 2	 <<	 <<
 Aux	 Shift + 3	 Repeat	 Text
 USB	 Shift + 4	 Step	 Shift + Pause
 Open / Close	 Eject	 >>	 >>
 TV / Video	 TV/R	 I<<	 I<<
 1 / RDS Display	 1	 Stop	 Stop
 2	 2	 Play / Pause	 Play
 3 / TA	 3	 Play / Pause	 Pause
 4 / PTY -	 4	 >>I	 >>I
 5 / PTY Search	 5	 Volume +	 Vol +
 6 / PTY +	 6	 Volume -	 Vol -
 7	 7	 Mute	 Mute
 8	 8	 Tuning + / CH +	 Ch +
 9	 9	 Tuning - / CH -	 Ch -
 0 / Video Sel	 0	 Menu	 Menu





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok

