








 

 



 

 

 

 

 

 







 



 

 

 

 

 

 

 















 






Original	Replacement	Original	Replacement
 Power	 Power	 V -	 Vol -
 Mute	 Mute	 Red / Status	 Red
 1	 1	 Green / Sleep	 Green
 2	 2	 Green / Sleep	 Shift + Power
 3	 3	 Blue / Review	 Blue
 4	 4	 Yellow / V-PP	 Yellow
 5	 5	 Yellow / V-PP	 Format
 6	 6	 Size	 3D
 7	 7	 Zoom	 Eject
 8	 8	 TV / TXT	 Text
 9	 9	 Cancel	 Back
 0	 0	 Index	 Info
 --/--	 GUIDE	 Stop	 Stop
 TV / AV	 AV	 Up / P +	 Up
 P +	 Ch +	 Down / P -	 Down
 P -	 Ch -	 Right / V +	 Right
 V +	 Vol +	 Left / V -	 Left

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 TV	 AUX
 DVD	 SAT	 PLAY MODE	 REC MODE
 SAT	 AUX	 Play	 Pause
 AUX	 TV	 Stop	 Red dot
 TV	 DVD	 Fast Rewind	 Fast Forward
 DVD	 SAT	 SOUND	 AD
 SAT	 AUX	 SETTINGS	 OPT
 AUX	 TV	 LIST	 ECO
 TV	 DVD	 SEARCH	 PICTURE
 DVD	 SAT	 SLEEP	 3D
 SAT	 AUX	 TV/R	 TIMER
 AUX	 TV	 FORMAT	 AV
 TV	 DVD	 D.MENU	 TEXT
 DVD	 SAT	 REPEAT	 ZOOM
 SAT	 AUX	 ZOOM	 Up
 AUX	 TV	 TEXT	 Down
 TV	 DVD	 RETURN	 BACK
 DVD	 SAT	 BACK	 CLEAR
 SAT	 AUX	 INFO	 EXIT
 AUX	 TV	 HOME	 RETURN
 TV	 DVD	 SMART	 BACK
 DVD	 SAT	 APP	 HOME
 SAT	 AUX	 MEDIA	 SMART
 AUX	 TV	 +	 +
 TV	 DVD	-	 -
 DVD	 SAT	1	2
 SAT	 AUX	2	3
 AUX	 TV	3	4
 TV	 DVD	4	5
 DVD	 SAT	5	6
 SAT	 AUX	6	7
 AUX	 TV	7	8
 TV	 DVD	8	9
 DVD	 SAT	9	0
 SAT	 AUX	0	FAV
 AUX	 TV	FAV	PRE-CH
 TV	 DVD	PRE-CH	A
 DVD	 SAT	A	B
 SAT	 AUX	B	C
 AUX	 TV	C	D
 TV	 DVD	D	
 DVD	 SAT		
 SAT	 AUX		



