 








 

 



























 











 


















| Original   | Replacement  | Original   | Replacement   |
|--|--|--|---|
|  Standby    |  Power              |  TV / Radio |  TV/Radio /            |
|  Mute       |  Mute / Dimmer      |  Menu       |  Menu / Home           |
|  1          |  1                  |  Up         |  Up                    |
|  2          |  2                  |  Exit       |  Exit / Cancel / Clear |
|  3          |  3                  |  Left       |  Left                  |
|  EPG        |  Guide / EPG / -/-- |  OK         |  OK                    |
|  4          |  4                  |  Right      |  Right                 |
|  5          |  5                  |  Record     |  Rec / Rec Mode        |
|  6          |  6                  |  Down       |  Down                  |
|  Audio      |  Audio / Lang I/II  |  Stop       |  Stop / Hold           |
|  7         |  7                 |  Vol +     |  Vol+                 |
|  8        |  8                |  CH +     |  CH+ / Page+         |
|  9        |  9                |  Vol -    |  Vol-                |
|  Subtitle |  Subtitle / EQ    |  TTX      |  Text / Goto         |
|  Info     |  Info / Angle     |  FAV      |  Fav / Marker / PC   |
|  0        |  0                |  CH -     |  CH- / Page-         |
|  Recall   |  Back / Return    |  Media    |  Display / Media     |





|  | Original | Replacement  |
|--|----------|--|
|   | I<< Prev |  I<< / Preset-  |
|   | Play     |  Play / Slow  |
|   | << Rew   |  << / Tune-   |
|   | USB      |  +  Shift + 8 |
|   | Next>>I  |  >>I / Preset+  |
|   | Pause    |  Pause / Step / Freeze  |
|   | Fwd >>   |  >> / Tune+   |
|   | Red      |  Red / Netflix / Search   |
|   | Green    |  Green / APP / Repeat   |
|   | Yellow   |  Yellow / YouTube / Repeat  |
|  | Blue     |  Blue / Prime Video / Random   |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

