
















 





 





 



 

 





















































Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Sleep	 Sleep / Timer
 F1	 Exit / Cancel / Clear	 Recall	 Back / Return
 [:≡]	 D.Menu / Top	 L / R	 Eject / Surround
 Smart S	 Sound / Title	 Index / Play	 Play / Slow
 Smart P	 Shift + Picture / Format	 Index / Play	 Display / Media

Original	Replacement	Original	Replacement
 Up	 Up	 Left	 Left
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Down	 Down	 Vol +	 Vol+
 Vol +	 Vol+	 Menu	 Menu / Home
 Menu	 Menu / Home	 CH +	 CH+ / Page+
 CH +	 CH+ / Page+	 Vol -	 Vol-
 Vol -	 Vol-	 Source	 AV / Input / RDS
 Source	 AV / Input / RDS	 CH -	 CH- / Page-
 CH -	 CH- / Page-	 Info	 Info / Angle
 Info	 Info / Angle	 Sleep	 Sleep / Timer
 Sleep	 Sleep / Timer	 Recall	 Back / Return
 Recall	 Back / Return	 L / R	 Eject / Surround
 L / R	 Eject / Surround	 Index / Play	 Play / Slow
 Index / Play	 Play / Slow	 Index / Play	 Display / Media
 Index / Play	 Display / Media		





Original	Replacement	Original	Replacement
Zoom / Pause	Zoom / Size	Green / Subtitle	Green / APP / Repeat
Zoom / Pause	Pause / Step / Freeze	Yellow / Fav	Fav / Marker / PC
Reveal / Stop	Stop / Hold	Yellow / Fav	Yellow / YouTube / Repeat
Reveal / Stop	Setup / OPT /	Blue / EPG	Guide / EPG / -/-
TTX	Text / Goto	Blue / EPG	Blue / Prime Video / Random
Hold / I<<	I<< / Preset-		
Hold / I<<	Shift + Stop /		
List / >>I	>>I / Preset+		
List / >>I	Smart / List		
Language / <<	<< / Tune-		
Language / <<	Audio / Lang I/II		
Save / >>	>> / Tune+		
Save / >>	Shift + Rec / Rec Mode		
Red / Radio / Rec	Rec / Rec Mode		
Red / Radio	Red / Netflix / Search		
Red / Radio / Rec	TV/Radio /		
Green / Subtitle	Subtitle / EQ		

