

















| | Original | Replacement | Original | Replacement |
|---|---------------|---|----------|-------------|
|  | USB |  D | | |
|  | CD |  C | | |
|  | Tuner |  B | | |
|  | AUX |  A | | |
|  | Open/Close |  ZOOM | | |
|  | Power |  | | |
|  | Vol+ |  + VOL | | |
|  | Vol- |  - VOL | | |
|  | Clock/Display |  DISPLAY INFO | | |
|  | Timer |  TIMER AV | | |
|  | Sleep |  PROG SLEEP | | |
|  | DBB |  SOUND DUAL | | |
|  | DSC |  AD SUBT | | |
|  | RDS/News |  SEARCH TV/R | | |
|  | Mute |  MUTE | | |
| | | | | |
| | | | | |

