









Original	Replacement
Source	AV / Input / RDS
Power	Power
TV	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0
Info	Info / Angle
Picture	Picture / Format
Menu	Menu / Home

Original	Replacement
Sound	Sound / Title
Up / Prog +	Shift + Up
Up / Prog +	Up
Left / Vol -	Left
Left / Vol -	Shift + Left
Right / Vol +	Shift + Right
Right / Vol +	Right
CTRL	D.Menu / Top
Down / Prog -	Down
Down / Prog -	Shift + Down
Mute	Mute / Dimmer
Exit	Exit / Cancel / Clear
Size / Audio	Zoom / Size
Still / Subt	Subtitle / EQ
PIP / Rep	Back / Return
Focus / A-B	Shift + Yellow / YouTube /
Normal / Title	Shift + Sound / Title






Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Info	 Info / Angle
 Picture	 Picture / Format
 Menu	 Menu / Home

Original	Replacement
 Sound	 Sound / Title
 Up / Prog +	 Up
 Up / Prog +	 Shift + Up
 Left / Vol -	 Shift + Left
 Left / Vol -	 Left
 Right / Vol +	 Right
 Right / Vol +	 Shift + Right
 CTRL	 D.Menu / Top
 Down / Prog -	 Down
 Down / Prog -	 Shift + Down
 Exit	 Exit / Cancel / Clear
 Size / Audio	 Zoom / Size
 Still / Subt	 Subtitle / EQ
 PIP / Rep	 Back / Return
 Focus / A-B	 Shift + Yellow / YouTube /
 << / I<<	 << / Tune-
 Play / Pause	 Play / Slow



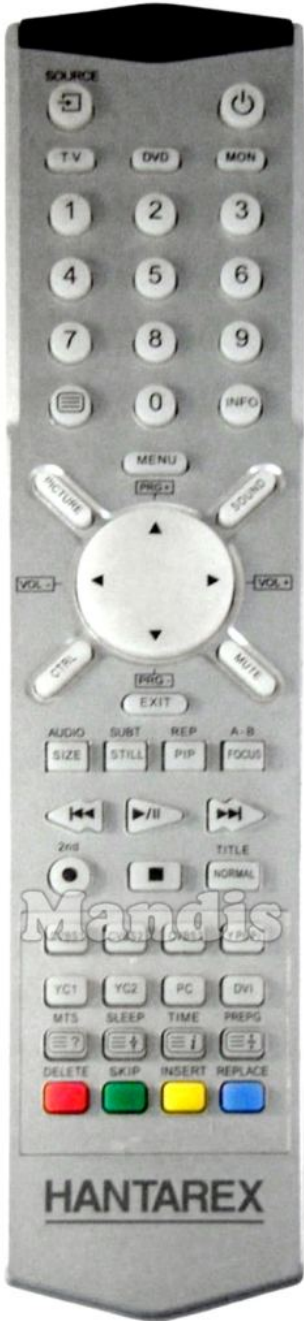

Original	Replacement	Original	Replacement
	+ Shift + Play /		Red / Netflix / Search
	>> / Tune+		Green / APP / Repeat
	Rec / Rec Mode		Yellow / YouTube / Repeat
	Stop / Hold		Blue / Prime Video / Random
	+ Shift + Sound / Title		
	+ Shift + 1		
	Display / Media		
	+ Shift + 3		
	Setup / OPT /		
	+ Shift + 4		
	+ Shift + 5		
	Fav / Marker / PC		
	+ Shift + D.Menu / Top Menu		
	+ Shift + Back / Return		
	+ Shift + Zoom /		
	Sleep / Timer		
	Pause / Step / Freeze		

Original	Replacement	Original	Replacement
	Red / Netflix / Search		Green / APP / Repeat
	Yellow / YouTube / Repeat		Blue / Prime Video / Random





Original	Replacement
Source	AV / Input / RDS
Power	Power
TV	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0
Info	Info / Angle
Picture	Picture / Format
Menu	Menu / Home

Original	Replacement
Sound	Sound / Title
Up / Prog +	Up
Up / Prog +	+ Shift + Up
Left / Vol -	+ Shift + Left
Left / Vol -	Left
Right / Vol +	+ Shift + Right
Right / Vol +	Right
CTRL	D.Menu / Top
Down / Prog -	+ Shift + Down
Down / Prog -	Down
Mute	Mute / Dimmer
Exit	Exit / Cancel / Clear
Size / Audio	Zoom / Size
Still / Subt	Subtitle / EQ
PIP / Rep	Back / Return
Focus / A-B	+ Shift + Yellow / YouTube / REPEAT A-B
Rec / 2nd	Rec / Rec Mode





Original	Replacement
Normal / Title	+ Shift + Sound / Title
CVBS 1	+ Shift + 1
CVBS 2	+ Shift + 2
CVBS 3	+ Shift + 3
Y.Pb.Pr.	Setup / OPT /
YC 1	+ Shift + 4
YC 2	+ Shift + 5
PC	Fav / Marker / PC
DVI	+ Shift + D.Menu / Top Menu
Reveal / MTS	+ Shift + Back / Return
Size / Sleep	+ Shift + Zoom /
Index / Time	Sleep / Timer
Freeze / PREPG.	Pause / Step / Freeze
Red / Delete	Red / Netflix / Search
Green / Skip	Green / APP / Repeat
Yellow / Insert	Yellow / YouTube / Repeat
Blue / Replace	Blue / Prime Video / Random

Original	Replacement

