









 




 




 

 

 
 
 
 

 
 
 

 
 




Original	Replacement	Original	Replacement
	Power		FAV
	NET		Shift + Fav / Marker / PC
	1		Vol+
	2		Vol-
	3		3D
	4		CH+ / Page+
	5		CH- / Page-
	6		EPG
	7		Mute / Dimmer
	8		Mode / AV
	9		ECO
	0		End
	Recall		Up / >>I
	Input		Up / >>I
	Aspect		Down / I<<
	Dual / I/II/I+II		Down / I<<
	i+		Right / >>
			Left / <<





Original	Replacement
OK	OK
MENU	MENU / Home
Back	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Text	Text / Goto
Subtitle	Subtitle / EQ
ATV / DTV	Smart / List
Radio	TV/Radio /
Source Power	Shift + Power
Rec	Rec / Rec Mode
Rec Stop	Shift + Stop /
USB Rec	Shift + Rec / Rec Mode
<<	<< / Tune-
Stop	Stop / Hold

Original	Replacement
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
>>	>> / Tune+

