






 

 

 

 

 

 




 

 

 


















 

 

 




 
 

 





 






 






 




 







 


Original	Replacement	Original	Replacement
 Standby / On	 Power	 ShowView	 Smart
 VCR Eject	 Shift + Exit	 Cancel	 Exit
 DVD Open / Close	 Eject	 Title Menu / Top Menu	 Menu
 DVD / VCR	 Media	 Up / CH +	 Up
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Down
 3	 3	 Down / CH -	 Ch -
 4	 4	 Right / TRK +	 Right
 5	 5	 Left / TRK -	 Left
 6	 6	 Enter	 Ok
 7	 7	 DVD Menu	 D. Menu
 8	 8	 Setup	 Options
 9	 9	 Stop	 Stop
 0	 0	 Play	 Play
 Return	 Back	 Pause / Still	 Pause
 Timer Rec	 Shift + AV	 I<< Skip / Index -	 I<<
 Input Select	 AV	 << Rew / Search	 <<





Original	Replacement
 >> F.Fwd /	 >>
 >>I Skip / Index	 >>I
 One Touch	 Text
 CM Skip	 Format
 Slow I>	 Shift + >>
 Rec	 Rec
 Rec Mode / Speed	 Shift + Rec
 Dubbing	 3D
 Audio / Audio select	 Dual
 Display	 Info
 Zoom	 Shift + Eject
 Repeat A-B	 Shift + Text
 Zero Return	 Shift + Back
 Counter Reset / Angle	 Sleep
 Subtitle / ATR	 Subt
 Play Mode / Replait	 Shift + Play
 Clock Counter	 Mute

Original	Replacement
 TV / VCR	 TV/R

