
 
 


 



 

 
 

 
 
 
 
 


 
 
 



 
 
 
 
 
 





 



 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Lang / Nicam	 Dual
 Mute	 Mute	 Input	 AV
 1	 1	 CH +	 Ch +
 2	 2	 CH -	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Menu	 Menu
 9	 9	 Exit	 Exit
 0	 0	 Display	 Info
 List	 List	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Shift + Dual
 Vol +	 Vol +	 Sleep	 Sleep
 Vol -	 Vol -	 FAV	 Pre Ch
 Aspect	 Format	 Fav -	 Shift + Down





Original		Replacement		Original		Replacement	
	Fav +	 + 	Shift + Up		Yellow		Yellow
	EPG		Guide		Blue		Blue
	Text		Text				
	Hold	 + 	Shift + Stop				
	TV / Radio		TV/R				
	Subtitle		Subt				
	Index / <<		<<				
	Size / >>		>>				
	Reveal / I<<		I<<				
	Subpage / >>I		>>I				
	Rec		Rec				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Media		Media				
	Red		Red				
	Green		Green				

