












 

 



 

 






Original	Replacement
Tuner	Shift + 6
Power	Power
Open / Close	Eject / Surround
Aux	Shift + 7
DVD	Shift + 2
USB	Shift + 8
Dimmer	Shift + Mute / Dimmer
Prog / Memo	TV/Radio /
Audio	Audio / Lang I/II
Sound	Sound / Title
S-Title	Subtitle / EQ
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
<< / Scan -	<< / Tune-

Original	Replacement
I<< / Skip -	I<< / Preset-
>>I / Skip +	>>I / Preset+
>> / Scan +	>> / Tune+
Title	Shift + Sound / Title
Stop	Stop / Hold
Play	Play / Slow
Pause / Step	Pause / Step / Freeze
Zoom	Zoom / Size
Setup	Setup / OPT /
Display	Display / Media
Menu	Menu / Home
Up / Preset +	Up
Return	Back / Return
Left / Tun. -	Left
Enter	OK
Right / Tun. +	Right
Down / Preset -	Down





Original	Replacement
 VSM	 Smart / List
 Sleep	 Sleep / Timer
 Vol +	 Vol+
 XTS Pro	 Text / Goto
 Mute	 Mute / Dimmer
 Vol -	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PTY / HDMI	 Picture / Format
 0	 0

Original	Replacement
 RDS / Resol.	 Info / Angle
 TV Power	 Shift + Power
 TV PR +	 CH+ / Page+
 TV Vol +	 Shift + Vol+
 TV Input	 AV / Input / RDS
 TV PR -	 CH- / Page-
 TV Vol -	 Shift + Vol-

