



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV / R	TV/Radio /
0	0
Home	Shift + Menu /
Fav	Fav / Marker / PC
Back	Back / Return
Audio	Audio / Lang I/II

Original	Replacement
Info	Info / Angle
EPG	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Vol +	Vol+
P +	Shift + CH+ /
CH +	CH+ / Page+
Vol -	Vol-
List	Smart / List
CH -	CH- / Page-
P -	Shift + CH- /
OPT	Setup / OPT /





	Original	Replacement	Original	Replacement
	 Text	 Text / Goto		
	 Sub.	 Subtitle / EQ		
	 Message	 Display / Media		
	 Pause	 Pause / Step / Freeze		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 I<<	 I<< / Preset-		
	 >>I	 >>I / Preset+		
	 Stop	 Stop / Hold		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		

