









 
 

 

 



 
 



 


 




 








 




 

 
 
 

 

 



 
 
 

 
 


 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Input	 AV	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 [i+]	 Info
 3	 3	 Guide	 Guide
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 Lang	 Dual	 Red	 Red
 TXT	 Text	 Green	 Green
 P+	 Ch +	 Yellow	 Yellow
 P-	 Ch -	 Blue	 Blue
 Home	 Smart	 Prime Video	 Shift + Smart

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 TV
 Input	 AV	 DVD	 DVD
 1	 1	 SAT	 SAT
 2	 2	 AUX	AUX
 3	 3	 PLAY MODE	 PLAY MODE
 4	 4	 REC MODE	REC MODE
 5	 5	 Play	 Play
 6	 6	 Pause	 Pause
 7	 7	 Stop	 Stop
 8	 8	 FF	 FF
 9	 9	 RR	 RR
 0	 0	 EJECT	 EJECT
 Lang	 Dual	 DISC NAV	 DISC NAV
 TXT	 Text	 SOUND	 SOUND
 P+	 Ch +	 AD	 AD
 P-	 Ch -	 SETTINGS	SETTINGS
 Home	 Smart	 LIST	 LIST
		 DUAL	 DUAL
		 SUBT	 SUBT
		 OPT	OPT
		 PROG	 PROG
		 SEARCH	 SEARCH
		 PICTURE	 PICTURE
		 ECO	ECO
		 SLEEP	 SLEEP
		 TV/R	 TV/R
		 FORMAT	 FORMAT
		 3D	3D
		 E-MANUAL	 E-MANUAL
		 REPEAT	 REPEAT
		 ZOOM	 ZOOM
		 TIMER	TIMER
		 D.MENU	 D.MENU
		 TEXT	 TEXT
		 UP	 UP
		 AV	AV
		 TOP MENU	 TOP MENU
		 INFO	INFO
		 MENU	 MENU
		 OK	 OK
		 UP	 UP
		 DOWN	 DOWN
		 LEFT	 LEFT
		 RIGHT	RIGHT
		 EXIT	 EXIT
		 BACK	 BACK
		 HOME	 HOME
		 SMART	 SMART
		 APP	 APP
		 MEDIA	MEDIA
		 VOL+	 VOL+
		 CH+	 CH+
		 VOL-	 VOL-
		 CH-	 CH-
		 1	 1
		 2	 2
		 3	 3
		 4	4
		 5	 5
		 6	 6
		 7	 7
		 8	8
		 9	 9
		 0	 0
		 FAV	 FAV
		 GUIDE	 GUIDE
		 PRE-CH	 PRE-CH
		 A	 A
		 B	 B
		 C	 C
		 D	D
		 Mandis SHOP	 Mandis SHOP
		 www.mandis.tv	 www.mandis.tv



