









 
 

 

 



 
 



 
 

 













 




 

 
 
 

 

 



 
 
 

 
 


 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Input	 AV	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 [i+]	 Info
 3	 3	 Guide	 Guide
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 Lang	 Dual	 Red	 Red
 TXT	 Text	 Green	 Green
 P+	 Ch +	 Yellow	 Yellow
 P-	 Ch -	 Blue	 Blue
 Home	 Smart	 Prime Video	 Shift + Smart

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 TV
 Input	 MUTE	 DVD	 DVD
 1	 SAT	 SAT	 SAT
 2	 AUX	 AUX	AUX
 3	 TV	 TV	 TV
 4	 DVD	 DVD	 DVD
 5	 SAT	 SAT	 SAT
 6	 AUX	 AUX	AUX
 7	 TV	 TV	 TV
 8	 DVD	 DVD	 DVD
 9	 SAT	 SAT	 SAT
 0	 AUX	 AUX	AUX
 Lang	 TV	 TV	 TV
 TXT	 DVD	 DVD	 DVD
 P+	 SAT	 SAT	 SAT
 P-	 AUX	 AUX	AUX
 Home	 TV	 TV	 TV
 Smart	 DVD	 DVD	 DVD
 Prime Video	 SAT	 SAT	 SAT
 Shift + Smart	 AUX	 AUX	AUX



