




 





 



 



 



 





 




 




 

 





 



 

 



 














Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 Power Tv	 Shift + Power	 Picture Mode	 Format
 Eject	 Eject	 O)))	 Dual
 1	 1	 [...]	 Subt
 2	 2	 Camera	 TV/R
 3	 3	 SUR	 Options
 4	 4	 I<<	 I<<
 5	 5	 >>I	 >>I
 6	 6	 Zoom	 Shift + Eject
 7	 7	 Picture Navi	 Media
 8	 8	 <<	 <<
 9	 9	 >>	 >>
 0	 0	 ←	 Ch -
 Clear	 Exit	 →	 Ch +
 Time/Text	 Text	 Play	 Play
 Vol+	 Vol +	 Pause	 Pause
 Vol-	 Vol -	 Stop	 Stop





Original	Replacement	Original	Replacement
Up	Up		
Right	Right		
Down	Down		
Left	Left		
Enter	Ok		
Display	Info		
Top Menu	Shift + Menu		
Menu	Menu		
Return	Back		

