
 
 
 



 







 

 
 

 

 

 






 

 
 




Original	Replacement
 Power	 Power
 Home	 Smart
 Disc/Pop Up Menu	 Menu
 Radio	 TV/R
 Audio Source	 AV
 Top Menu	 Shift + Menu
 Back	 Back
 :≡/Options	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<	 I<<
 >I	 >>I
 Stop	 Stop
 Eject	 Eject

Original	Replacement
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Audio	 Shift + Dual
 III/Sound Settings	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original		Replacement		Original		Replacement	
	9		9				
	0		0				
	Repeat		Text				
	Subtitle		Subt				
	Red		Red				
	Green/Dock for		Green				
	Yellow/Help		Yellow				
	Blue		Blue				

