

 
 













 
 



 
 


 

 

 
 
 



 
 

 
 
 

 



 
 

 
 
 

 
 




 

 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Media
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 LCD Menu	 Menu
 9	 9	 DVB Menu	 D. Menu
 0	 0	 Input	 AV
 -/--	 Shift + Guide	 P.Mode	 Format
 Recall	 Back	 S.Mode	 Shift + Options
 Vol+	 Vol +	 Sleep	 Sleep
 Vol-	 Vol -	 Info	 Info
 Nicam	 Smart	 FAV	 Pre Ch

Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Media
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 LCD Menu	 Menu
 9	 9	 DVB Menu	 D. Menu
 0	 0	 Input	 AV
 -/--	 Shift + Guide	 P.Mode	 Format
 Recall	 Back	 S.Mode	 Shift + Options
 Vol+	 Vol +	 Sleep	 Sleep
 Vol-	 Vol -	 Info	 Info
 Nicam	 Smart	 FAV	 Pre Ch





Original	Replacement
FAV+ FAV+	SHIFT + + CH Shift + Ch +
FAV- FAV-	SHIFT + - CH Shift + Ch -
TEXT Text	REPEAT TEXT Text
HOLD Hold	Stop
LANG Lang	SOUND DUAL Dual
EPG EPG	- / - GUIDE Guide
INDEX Index	SETTINGS OPT Options
SIZE Size	ZOOM Eject
REVEAL Reveal	ECO 3D 3D
SUBPAGE Subpage	SHIFT + AD SUBT Shift + Subt
TV/RADIO Red / Tv/Radio	A Red
TV/RADIO Red / Tv/Radio	SEARCH TV/R TV/R
AUDIO Green / Audio	B Green
AUDIO Green / Audio	SHIFT + SOUND DUAL Shift + Dual
FREEZE Yellow / Freeze	C Yellow
FREEZE Yellow / Freeze	Pause
SUBTITLE Blue / Subtitle	D Blue

Original	Replacement
SUBTITLE Blue / Subtitle	AD SUBT Subt

