

 





 












 






 






 

 

 
 








 



 











Original	Replacement	Original	Replacement
 Power	 Power	 DVD / CD	 Media
 Mute	 Mute	 Vol +	 Vol +
 Menu	 Menu	 Vol -	 Vol -
 1 / Disc 1	 1	 >>	 >>
 2 / Disc 2	 2	 <<	 <<
 3 / Disc 3	 3	 Up	 Up
 4 / Disc 4	 4	 Right	 Right
 5 / Disc 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7 / Angle	 7	 OK / Save	 Ok
 8	 8	 Return	 Back
 9 / Night DVD	 9	 Sleep	 Sleep
 0 / --	 0	 Play Mode	 Shift + Play
 Aux 1 / SAT /	 AV	 Pause	 Pause
 Aux 2 / VCR	 Shift + AV	 Stop	 Stop
 Tuner	 Shift + TV/R	 Rec / Zoom	 Rec
 TV	 TV/R	 << REV	 <<



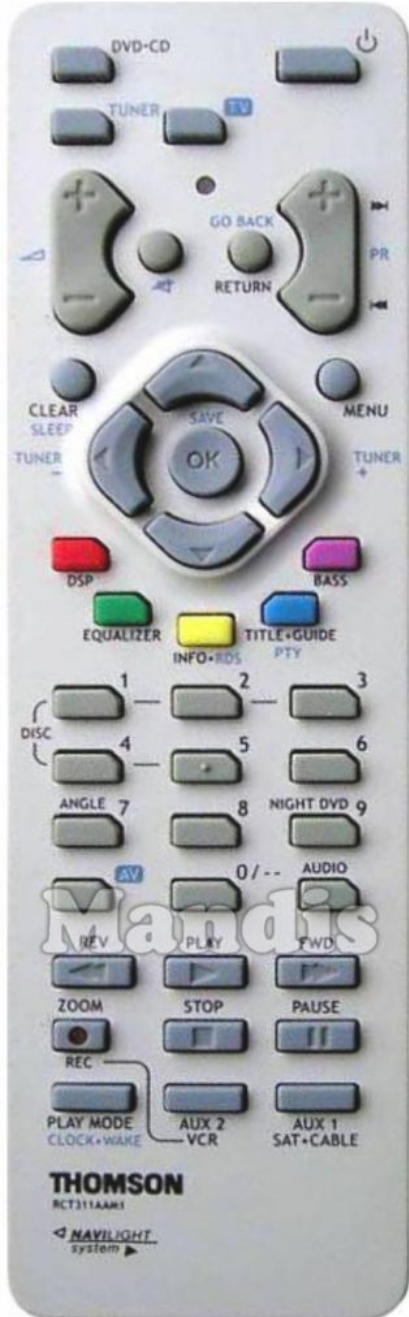

Original	Replacement	Original	Replacement
 Play	 Play		
 >> FWD	 >>		
 Audio	 DUAL		
 PR +	 + CH		
 PR -	 - CH		
 Tuner -	 SHIFT + 		
 Tuner +	 SHIFT + 		
 Purple / Bass	 FAV PRE-CH		
 Red / DSP	 A		
 Green / Equalizer	 B		
 Yellow / Info	 C		
 Blue / Title/Guide	 D		
 Yellow / Info	 DISPLAY INFO		
 Blue / Title/Guide	 -/-- GUIDE		

Original	Replacement	Original	Replacement

