 



 











 



























Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 Tv/VCR	 TV/Radio /
 Mute	 Mute / Dimmer
 i/Menu	 Menu / Home
 Up	 Up
 Prog Up	 CH+ / Page+
 AV	 AV / Input / RDS
 Left	 Left
 Vol-	 Vol-
 OK/CLK/CNT	 OK
 Right	 Right
 Vol+	 Vol+
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Prog Down	 CH- / Page-
 CM Skip	 Back / Return

Original	Replacement
 LP	 Smart / List
 Stop	 Stop / Hold
 P/Still	 Pause / Step / Freeze
 Rec/ITR	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 eZ Power Off	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 eZ Repeat	 Green / APP / Repeat
 7	 7
 8	 8



















Original	Replacement	Original	Replacement
	9		9
	0		0
	C.Lock		Display / Media





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Tv AV		AV / Input / RDS
	Prog Up		CH+ / Page+
	Prog Down		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-

Original	Replacement



Mandis

Mandis



Mandis SHOP
www.mandis.tv