












Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Recall	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Quitter	 Exit / Cancel / Clear

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Guide	 Guide / EPG / -/-
 Down	 Down
 TV / Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Enregistrer	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 FAV	 Fav / Marker / PC
 Yellow	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Blue	 Blue / Prime Video / Random
 Lecteur Media	 Display / Media
 I<<	 I<< / Preset-
 Play	 Play / Slow
 <<	 << / Tune-





	Original	Replacement		Original	Replacement
	Timer	 Sleep / Timer			
	>>I	 >>I / Preset+			
	Pause	 Pause / Step / Freeze			
	>>>	 >>> / Tune+			
	TTX	 Text / Goto			
	Audio	 Audio / Lang I/II			
	S-Titres	 Subtitle / EQ			
	Resolution	 Picture / Format			

	Original	Replacement		Original	Replacement

