





 






 


 

 

 
 

 
 
 
 
 









 


 
 

 

 
 



 


 
 

 

 

 


 

 







 
 






 
 
 
 
 
 
 

 




 

 

 


Original	Replacement	Original	Replacement
	Power		Power
	O		Guide
	Rec		Rec
	I<<		I<<
	Red		Red
	Green/[[]]		Green
	Stop		Stop
	Play		Play
	Yellow / List		Yellow
	>>I		>>I
	PIP [■]		Blue
	AV/[?]		AV
	I-II/[≡≡]		Dual
	[<>]/[+]		Format
	[-O-]		Exit
	Menu		Menu
	[≡]		Text
	Pause		Pause
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Smart J		Smart
	Smart []		Media
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4



 





 
 

 
 
 
 


 
 
 
 
 

 

 
 







 
Original	Replacement
 Power	 Power
 TV	 Guide
 Rec	 Rec
 I<<	 I<<
 Red	 Red
 Green/[[]]	 Green
 Stop	 Stop
 Play	 Play
 Yellow / List	 Yellow
 PIP [■]	 Blue
 >>I	 >>I
 AV/[?]	 AV
 I-II/[≡≡]	 Dual
 [<>]/[+]	 Format
 -O-	 Exit
 Menu	 Menu
 Pause	 Pause

Original	Replacement
 [≡]	 Text
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Smart ♪	 Smart
 Smart []	 Media
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4





Original	Replacement
 Power	 Power
 I<<	 I<<
 >>I	 >>I
 AV/[?]	 AV
 I-II[≡ ≡]	 Dual
 [<>]/[+]	 Format
 -O-	 Exit
 Pause	 Pause
 [≡]	 Text
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 Smart J	 Smart
 Smart []	 Media
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Pre Ch

